 


## ZTE ZXHN F660 ONT CONFIGURATION

**Step 01:** Open the web browser (Internet Explorer/Mozilla Firefox)  
Type in the address bar 192.168.1.1.




OR,

Open the Run Program and type <http://192.168.1.1>


U can open the Run Program like this way




Click this button on the keyboard

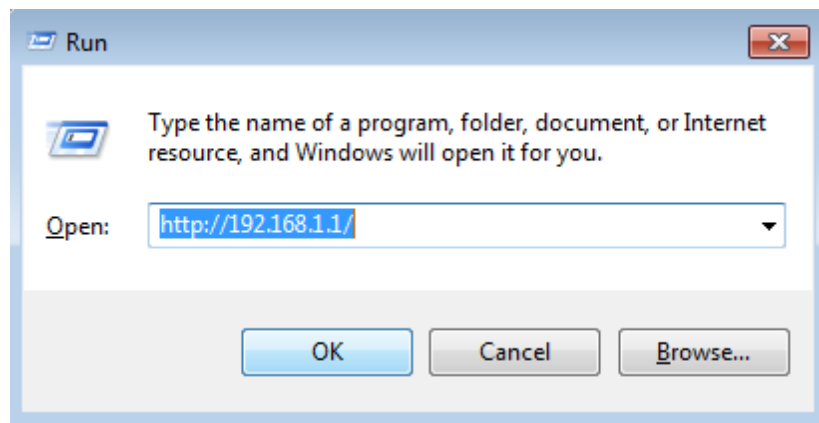

Then click ok to proceed.

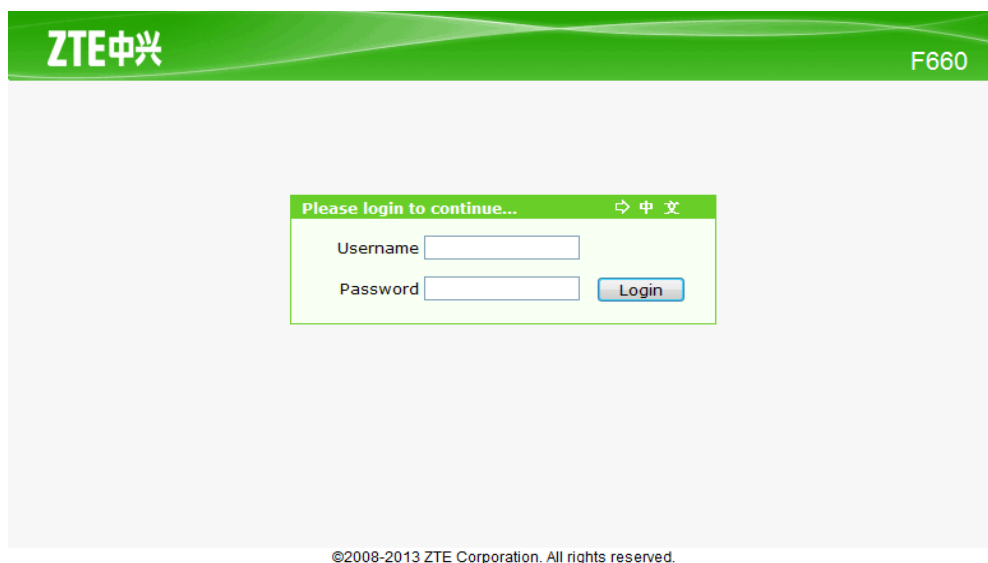

**Step 02:** Put the username as, User name: user  
Type the password as, Password: user  
Then click login to proceed.

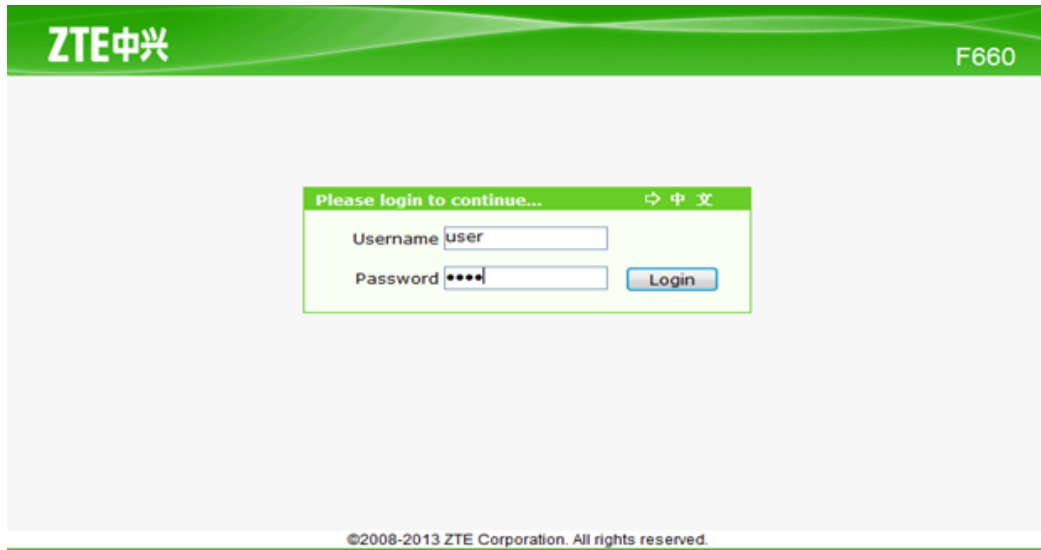

ZTE中兴 F660

Please login to continue... 中文


Username user

Password \*\*\*\* Login

©2008-2013 ZTE Corporation. All rights reserved.

**Step 03:** In quick setup enter the username & password

Then click Next button to continue

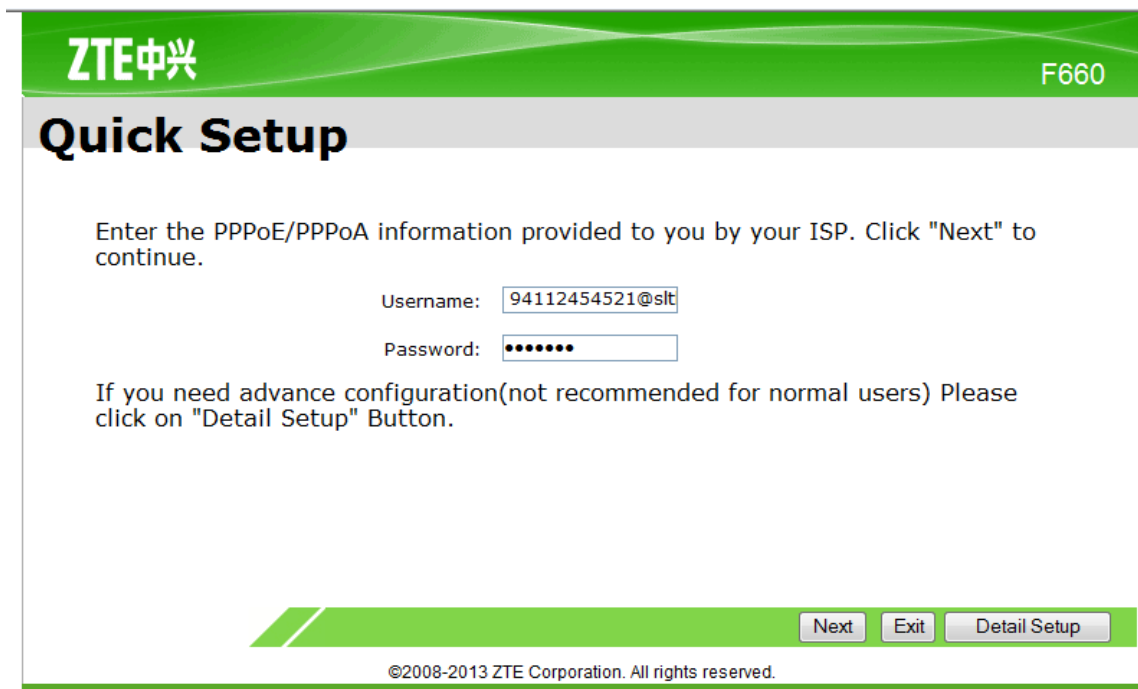

ZTE中兴 F660

## Quick Setup

Enter the PPPoE/PPPoA information provided to you by your ISP. Click "Next" to continue.

Username: 94112454521@slt

Password: \*\*\*\*\*


If you need advance configuration(not recommended for normal users) Please click on "Detail Setup" Button.

Next Exit Detail Setup

©2008-2013 ZTE Corporation. All rights reserved.

**Step 04:** In Quick setup put a tick on Enable SSID and type a wifi name for SSID. In pre-shared key enter a password for **Wi-Fi**. That should be more than 8 characters.

Then click **Save** button to continue.



ZTE中兴 F660

## Quick Setup

You may change the WLAN SSID and Pre-share Key in this page.

Enable SSID:

SSID:


Enter a keyword with at least 8 characters for secure connection of your wireless network. Keep this password in a safe place annotated. It will be necessary to add new devices to your wireless network.

Pre-Shared Key:

Back Save Exit Detail Setup

©2008-2013 ZTE Corporation. All rights reserved.

Then click **OK** button to continue.

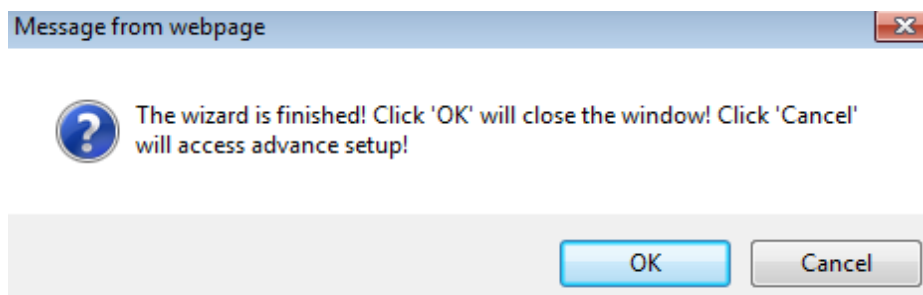

Message from webpage

The wizard is finished! Click 'OK' will close the window! Click 'Cancel' will access advance setup!

OK Cancel

Thank you.